

Dock-Mate Recharge & Backwashing Pre-Filter

NOTE INLET IS ON THE RIGHT AND OUTLET AFTER METER

CHECKING/REPLACING PRE-FILTERS

- 1) Ensure the water to the pre-filter is bypassed or shut off!
- 2) Press the red button on the top of the filter housing to relieve any pressure on the housing
- 3) Using the wrench provided with the system, unscrew housing (NOTE: although pressure is relieved from the housing, housing will still contain water. Use great care to prevent accidental spillage particularly when working in areas that may have electrical hazards)
- 1) Rinse off or replace filter with a 20 Micron sediment filter (FM-BB-10-20) as necessary.
- 2) Tighten housing and turn water on slowly. Check for leaks

RECHARGING DOCK – MATE SOFTENER

- 1) Prepare brine solution – dissolve salt in water
WE RECOMMEND PELLET SALT VS. ROCK IT IS A MUCH CLEANER SALT
MODEL DM-1000 ; USE 10 LBS OF SALT AND FILL WITH 4 GALLONS OF WATER (approximately to the top of the white brine tube located in Brine tank).
MODEL DM1001/1002/1004 ; USE 5-6 LBS OF SALT AND FILL WITH WATER to the top of the white brine tube located in the brine tank
NOTE: SATURATE SALT FOR A MINIMUM OF 1-2 HOURS LONGER IF USING COLD WATER UNDER 70 DEGREES.
- 2) Attach 3/8" line to quick connect fitting on brine tank and other end to brine (QC) fitting on the valve & turn blue handle to open position
NOTE: MAKE SURE YOU PUSH LINE IN SNUG TO QC FITTINGS OR IT WILL SUCK AIR (CHECK SUCTION AT BALL VALVE BEFORE INSERTING LINE)
- 3) Make sure outlet side of unit is closed, so water goes to drain. (HOSE IS ATTACHED WITH A NOZZLE AT THE END AND NOT ATTACHED TO THE VESSEL)
- 4) Turn water on ALL THE WAY 100% PRESSURE
- 5) Turn timer on system to 2 hours
- 6) When complete, turn water off, close ball valve & disconnect brine line from system
System is now ready to soften and treat water once again.
- 7) Empty & stow away brine tank for next use
- 8) Reset your digital meter back to 0 by pressing and holding total 1

TEST KIT INSTRUCTIONS

If you have the new hardness test kit in a blue box, simply follow directions Inside box top.

TROUBLE SHOOTING: BRINE NOT DRAWING– CHECK SUCTION AT BALL VALVE THEN CHECK CONNECTION TO BRINE TANK LINE HAS TO SEAT OVER O-RING.

USE SOFTENER MATE RESIN CLEANER TO KEEP RESIN FRESH AND FREE FROM BUILD-UP. ALSO USE RUST OUT WHEN USED WHERE IRON IS PRESENT

NEED ASSISTANCE? CALL US! PH: 954-527-0112 TOLL FREE 877-922-4862
Or E-MAIL SALES@YACHTMATE.COM